

QAS—CHEAT SHEET

POWERSERIES USER REFERENCE GUIDE

RELEASE 1

TO ARM ENTIRE SYSTEM – BOTH INTERIOR AND PERIMETER

- Close all windows and doors (the green Ready light will turn ON)

- Press and hold  (Away) for 2 seconds

(The keypad will beep rapidly 5 times and the red armed light will turn ON)

- Exit premises before the delay time expires

TO DISARM SYSTEM


 
- When you enter through the door, the keypad will emit a steady warning tone
- Enter your 4-digit Master Code or User Code (the armed light will turn OFF)

- If you make an error, press  and enter the 4-digit code again

TO ARM PERIMETER OF BUILDING AND STILL MOVE FREELY INSIDE

- Press and hold  (Stay) for 2 seconds


 
TO ARM SYSTEM WITH DOOR OR WINDOW OPEN

- Press   while disarmed
- The Bypass light will flash
- Enter the 2-digit zone number to be bypassed
- To exit the Bypass function press


 
TO SILENCE ALARM

- Enter your 4-digit Master Code or User Code

WHEN TROUBLE LIGHT COMES ON

- Press  
- Some keypads will describe the Trouble (full-message keypads); others will only identify the Trouble number (fixed-message and LED keypads)
- If Trouble number 8 is lit, the time and date needs to be reset


TO SET TIME AND DATE

- Press   and enter the 4-digit Master Code
- 1 long beep indicates an error, press and enter the Master Code again
- After 4 short beeps, press then 10 digits, 2 each for the hour, minute, month, day and year (HH:MM MM/DD/YY)
- Use a 24-hour clock (e.g. 8:30 pm = 20:30)


 







- Use 2 digits each to indicate the month and day (e.g. March 8 = 03 08)
- Only enter the last 2 digits of any given year (e.g. 2007 = 07)

TO ENABLE DOOR CHIME FEATURE

- Press and hold  (Door Chime) for 2 seconds
- 3 beeps = ON; 1 long beep = OFF

CHANGING KEYPAD BUZZER TONE

- If using a PK5500 keypad, press   and enter the 4-digit Master Code then proceed with the following:
 - Scroll to the phrase "Buzzer Control" and press 
- If using an LED or fixed-message keypad, press   and enter the 4-digit Master Code then proceed with the following:
 - Press and hold  (Left Arrow)
 - The tone will change
 - When the desired tone is identified, release  (Left Arrow)

TO SOUND AN ALARM MANUALLY

- Press and hold  (Fire) or  (Emergency) or  (Panic) for 2 seconds


LED Keypad, LCD Fixed-Message Keypad

To view a trouble condition, press [*][2]. The trouble light will flash. Refer to the chart below to determine the trouble condition (s) present.

Note: Some trouble conditions provide additional information (indicated with an '*' in the chart below). Press the number corresponding to the trouble condition to view the additional information.



Figure 1-1 Controls & Indicators - Keypad

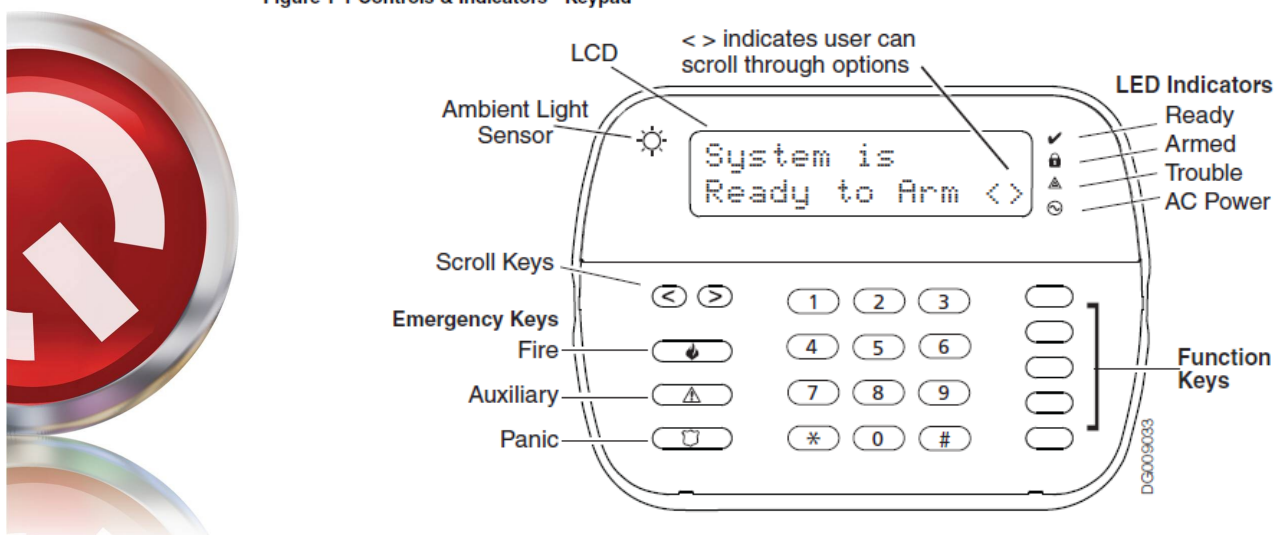

Light [1] * Note: When additional information is available for a specific trouble condition a [*] will appear on the display. Press the [*] key to view the additional information.	Service Required – press [1] for more information
Trouble [1]Low Battery	The main panel battery is below 11.5 VDC. The trouble condition will not clear until the battery is at least 12.5VDC under load
Trouble [2]Bell Circuit	
Trouble [3]General System Trouble	
Trouble [4]General System Tamper	
Trouble [5] Module Supervision	
Trouble [6] RF Jam Detected	
Trouble [7]PC5204 Low Battery	
Trouble [8]PC5204 AC Failure	
Light [2]	AC Trouble
Light [3]	Telephone Line Trouble
Light [4]	Failure to Communicate
Light [5] *	Zone Fault – press [5] for more information
Light [6] *	Zone Tamper – press [6] for more information
Light [7] *	Wireless Device Low Battery – press [7] for more information
Light [8]	Loss of Time or Date